


OBR ADV Gear RZR Lower Door Bag Installation Instructions

Congratulations on your OBR ADV Gear RZR Lower Door Bag purchase. Your OBR ADV Gear RZR Lower Door bags have been designed to fit the RZR Lower Door Panel #2880207 (yrs. 15',16',17' RZR 900, 900 EPS)



Thank you for your purchase Let's get started!

1) Each Lower Door bag has been produced with a series of one wrap hook and loop tabs that are intended to loop around the lower door frame. The plastic cover of the door frame is held in place by three (3) Torx screws. Remove these screws and the outer panel.

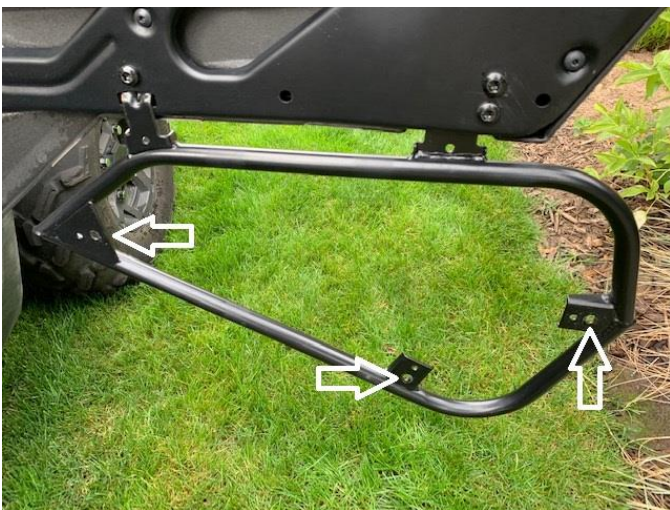

2) With the outer panel now removed from the lower door frame find the correct side bag. (**Lower Door Bags are left/right specific**) Start by attaching the one wrap

hook and loop along the lower rail of the door frame allowing the lower door bag to hang in place.



3) With the Lower Door Bag in place now attach the upper one wrap hook and loop to the upper rail of the door frame. Remember, it is best to fully wrap the frame rail with the hook and loop. (*The hook and loop tabs on the bag have been intentionally left a bit long. Trim back as needed with sharp scissors*)



Carefully reattach the outer plastic panel with the previously removed Torx screws. Be careful to not over tighten as these screws are threaded into plastic.

OBR ADV Gear

www.obradvgear.com -

obradvgear@gmail.com